


Rear Deflector Kit - 521131

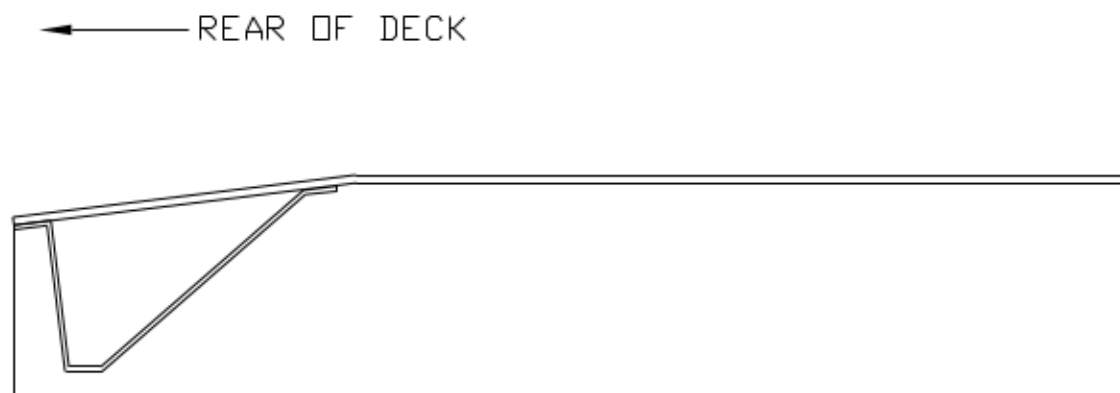

- ALWAYS KEEP THE DEFLECTOR TIGHT TO THE LEFT SIDE OF DECK TO AVOID GRASS FROM CATCHING.
- IF A TIGHTER FIT IS DESIRED, GRIND OFF LEFT EDGE OF SHIELD UNTIL DESIRED TIGHTNESS IS ACHIEVED
- SLIDE SHIELD INTO PLACE AS SHOWN ABOVE; LONG SIDE OF SHIELD TO THE FRONT.
- ONCE IN PLACE, SO EDGE OF DECK AND SHIELD ARE EVEN, CLAMP SHIELD TO DECK
- USING THE DEFLECTOR SHIELD HOLES AS PATTERN, DRILL HOLES FOR 5/16 x 3/4" CARRIAGE BOLTS
- BOLT INTO PLACE.

	PROGRESSIVE TURF		SEAFORTH ONTARIO		
			TITLE		
			TD 65		
			REAR DEFLECTOR		
			INSTRUCTIONS		